



**SSI Home Systems**

603-882-0067 • 877-622-SAFE (7233)

[eshultz@securelysound.com](mailto:eshultz@securelysound.com)

## Universal Remote Genesis MX-900 Operation

Date: Jan 2008

### To turn on equipment:

Press the **WATCH** button, then press the **ON** button in upper left while pointing remote at the system. Keep the remote pointed at the equipment during this operation. It may take up to 4 seconds for all of the codes to be transmitted.

- 1) WATCH
- 2) ON



### To turn OFF equipment:

Press the **WATCH** button, then press the **OFF** button in upper left while pointing remote at the system. Keep the remote pointed at the equipment during this operation. It may take up to 4 seconds for all of the codes to be transmitted.

- 1) WATCH
- 2) OFF



## To Watch Cable TV or Satellite:

At this point, all of the equipment should be on.

Press the **TV** button while pointing the remote at the equipment.

The display will now change to CABLE or SAT. The remote is now controlling your cable box or satellite receiver

You can change channels, view the guide, control volume, etc.

- 1)WATCH
- 2)TV



## To Watch a DVD Movie:

Press the **WATCH** button, then press the **DVD** button.

The remote will change to DVD mode and the screen will display DVD at the top. The remote is now controlling your DVD player. Commands such as MENU, SKIP, PLAY, PAUSE etc. will work.

- 1)WATCH
- 2)DVD



## To Listen to FM Radio:

Press the **LISTEN** button, then press the **FM** button.

The remote will change to Tuner mode and the screen will display DENON at the top. The remote is now controlling your DENON Receiver. The Channel + and – will cycle through your station presets.

- 1) LISTEN
- 2) FM



## To Listen to an audio CD:

Press the **LISTEN** button, then press the **CD** button.

The remote will change to DVD/CD mode and the screen will display CD at the top. The remote is now controlling your DENON CD or DVD player. Buttons such as Play, Pause, Stop will control your player.

- 1) LISTEN
- 2) CD



## To play ZONE 2 (If connected/Installed)

Press the **WATCH** button if you are not at the MAIN screen.

Press the **ZONE II** button.

The screen will change and display ZONE II at the top.



Turn on ZONE 2 by pressing the **Z2 ON** button.  
Select what audio source you wish to listen to. CD for example.



Now, still on the ZONE II screen, use the **Master Volume** buttons to change the volume of your ZONE 2 speakers.

The Receiver should display ZONE2 VOL. -XXdB as you adjust the volume.



If you have a wall mounted volume control knob, make sure this control is turned up all of the way clockwise.

You can turn ZONE 2 off by pressing the Z2OFF button in the upper right of the display.

Note: Only analog audio sources (CDs, AM/FM radio etc.) will play through the ZONE 2. Digital surround sound audio such as DVD movies will not play through the ZONE 2. An extra analog audio cable may be required to play digital sources through zone 2.

If the Receiver in ON and does not respond to any of the ZONE2 commands, press the ZONE2/ REC SELECT button on the front of the receiver until the display reads ZONE2 *source*. It should NOT display RECOUT *source*.